Bauknecht

GB WA 3700

PROGRAMME GUIDE

A. "On/Off" button with indicator light
B. Additional functions
C. Temperature Knob
D. Programme selector knob

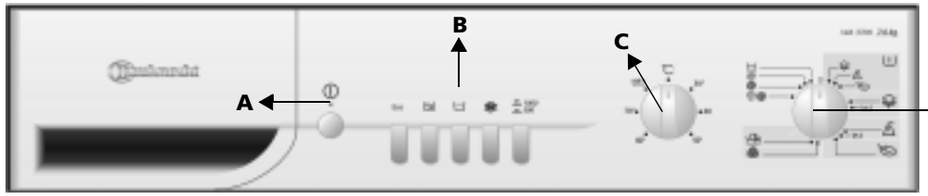

The running noises of the new, electronically-controlled motor are not the same as the ones you are used to from your old appliance. Don't be surprised - modern technology has a modern sound.

During the selected washing programme the programme selector knob moves by steps clockwise and can be corrected by half steps.

Programme	Care Labels	Type of wash/ Degree of soiling	Max. load Kg	Detergent and Additives			Additional selectable functions ❊					Notes
				Soft-tener	Main Wash	Pre-wash	Eco Eco	Half Load	Rinse Hold	No Spin	Spin Speed Reduction 1000 500	
Coloured cotton with prewash	95	Heavily soiled and temperature resistant bed linen, table linen and underwear, towels etc. made of cotton and linen.	7.0	❊	Yes	Yes	❊	❊	❊	❊	❊	–
Synthetic with prewash	60	Heavily soiled blouses, shirts etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	❊	Yes	Yes	❊	❊	❊	❊	❊ 1)	–
Delicate with prewash	40	Heavily soiled curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	❊	Yes	Yes	–	–	❊	❊	❊ 1)	–
Coloured cotton normal	95 60 40 30	Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	7.0	❊	Yes	–	❊	❊	❊	❊	❊	–
Coloured cotton rapid	60 40 30	Lightly soiled outer garments and sportswear made of cotton, polyester, polyamide and cotton blend.	7.0	❊	Yes	–	❊	❊	❊	❊	❊	–
Synthetic normal	60 50	Slightly to normally soiled blouses, shirts etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	❊	Yes	–	❊	❊	❊	❊	❊ 1)	–
Synthetic rapid	40 30	Slightly to normally soiled blouses, shirts etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	❊	Yes	–	❊	❊	❊	❊	❊ 1)	–
Delicate	40 30	Curtains and delicate dresses, skirts, shirts and blouses.	1.5	❊	Yes	–	–	–	❊	❊	❊ 1)	–
Wool		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable.	1.0	❊	Yes	–	–	–	❊	❊	❊ 1)	If you select "Rinse Hold" do not leave items to soak for too long.
Handwash		Textiles made of linen, silk, wool and viscose marked as "handwashable".	1.0	❊	Yes	–	–	–	❊	❊	❊ 2)	If you select "Rinse Hold" do not leave items to soak for too long.
Rinse + Spin	–	–	7.0	❊	–	–	–	❊	❊	❊	❊	With this programme you can add starch and/or fabric softener. Subsequent spinning is intensive.
Spin	–	–	7.0	–	–	–	–	–	–	—	❊	In this programme spinning is intensive. Same as the spin cycle in the "Coloured Cotton" programme.
Gentle spin	–	–	1.5	–	–	–	–	–	–	—	❊ 1)	A very gentle spin is used in this programme. Same as the spin cycle in the "Wool" programme.
Drain	–	–	–	–	–	–	–	–	–	—	–	Drain only - no spinning. Alternative method of terminating the synthetic, delicate and wool programme and for premature removal of the laundry.

❊: Option / Yes: dosing required.

1) For improved garment care spin speed is restricted to 900 rpm in this programme.

2) For improved garment care spin speed is restricted to 400 rpm in this programme.

Further advice is to be found in the instructions for use (Subject to technical alterations).

5019 401 05004

Black Process Plate

CONSUMPTION DATA*

Programme	Temperature selector knob (°C)	Load (kg)	Water (l)	Energy (kWh)	Programme duration ** approx. (hours : minutes)
Coloured Cotton	90	5.0	54***	1.70	2:00
Coloured Cotton	60	5.0	49	0.95	2:00
Coloured Cotton	40	5.0	49	0.60	2:05
Synthetic	60	2.5	55	0.80	1:30
Synthetic	40	2.5	55	0.60	1:20
Delicate	40	1.5	60	0.60	0:45
Wool	40	1.0	60	0.45	0:40
Handwash	30	1.0	60	0.30	0:40

Max Load 7.0 Kg.
* Consumption values were measured in normalized conditions in compliance with Standard IEC 60456.
** The programme duration can also vary from the chart values. The washing machine is able to allow for particular household conditions and to adapt the programme run time accordingly.
*** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

POUR IN DETERGENT, CLOSE DOOR AND SELECT PROGRAMME

Add the detergent as described in the "Detergent and Additives" chapter of the instructions for use.

1. Turn the **programme selector knob** clockwise to the desired programme.
2. Turn the **temperature selector** in any direction to the desired temperature.
3. **Special options** can be selected.
4. Check that the door is firmly closed and turn on the washing machine by pressing the **"ON/OFF"** button. The indicator lights up, indicating that the washing machine is on.

SELECT SPECIAL OPTIONS

Eco Eco

The duration of the wash is extended and the temperature reduced. In this way you save energy while still obtaining good washing results.

Half Load

Reduces water consumption, above all during rinsing. Suitable for small loads and lightly soiled laundry.
Note: Reduce amount of detergent.

Rinse hold

This option is particularly recommended for the programme "Synthetics" or "Delicates". The laundry remains in the last rinse water without being spun: discoloration of the laundry or additional creasing is prevented.

Terminate the "Rinse Hold" option:

Press the "Rinse Hold" button again; the wash cycle will terminate automatically with the appropriate spin cycle for the current programme.

If you do not wish to spin the clothes, press the Rinse stop button, turn the programme selector knob to the "Drain" programme and switch the machine on again.

"No Spin" button

Especially for delicate garments to avoid wear and tear caused by the spin.
Note: with the "Cotton" and "Synthetics" programmes a short spin cycle is provided in any case, even if the exclusion has been selected, in order to optimize rinsing results.

Spin Speed reduction 1000 500

Reduces the preselected maximum spin speed. In some programmes, the final maximum spin speed is limited in order to protect the laundry. Selecting a higher speed is not possible.

CANCEL PROGRAMME

1. Switch off the washing machine by pressing the "**ON/OFF**" button.
2. Set the programme selector to programme setting "Drain".
3. Start the programme by pressing the "**ON/OFF**" button.

PROGRAMME END

- At the end of the programme the programme selector is located at the "O" end position.
- Switch off the appliance, open the door and take out the laundry.
- Turn off the tap and leave the door ajar to allow the drum to dry out.

Black Process Plate